



SOTTOMARINO
ITALIA

www.sottomarinowatches.com

WATCH WARRANTY

Your SOTTOMARINO ITALIA brand watch is warranted by SOTTOMARINO ITALIA for a period of 3 years from the date of purchase under the terms and conditions of this warranty. The SOTTOMARINO ITALIA warranty covers material and manufacturing defects.

During the warranty period the watch movement, hands and dial are the only components covered under this warranty. These will be repaired or the watch will be replaced, at the sole discretion of SOTTOMARINO ITALIA, free of repair charges, if it proves to be defective in material or workmanship under normal use. A \$10.00 return shipping and handling fee will apply to all warranty service.

If the problem you are having with your watch is not covered by our warranty, or if your warranty has expired, the service and repair charges are as follows:

- \$45.00 for the repair of all components not covered under warranty; this includes the return shipping and handling fee.
- \$19.00 for battery replacement; this includes return shipping and handling fee.

The warranty does not cover :

- battery, crystal, strap or bracelet
- damage resulting from improper handling, lack of care, accidents or normal wear and tear
- water damage unless marked water-resistant
- indirect or consequential damage resulting from the defects or inaccuracy or inoperativeness of the watch

This warranty is void if the watch has been damaged by accident, negligence, unauthorized service, or other factors not due to defects in material or workmanship.

Should service be required, please send your watch, a copy of your sales receipt, and payment to:

PRECISION TIME, Inc.

ATTN: WSC

9466 S. 670 W.

Sandy, UT 84070

www.precisiontimeco.com

CARE FOR YOUR TIMEPIECE

- Never adjust the time on your watch when it reads between 8pm and 3am. During this time period the gears of the mechanism are too close together and such a change could cause damage to the inner workings of your watch.
- Keep your watch in a safe dry place.
- Clean your watch with soft, dry cloth and avoid abrasive materials such as cleaning agents. These materials may corrode and harm the outer plating of the watch. Have your case and band professionally cleaned at least twice a year to prevent corrosion and exterior damage.
- Thoroughly rinse your watch in fresh water, after exposure

to salt water, and gently clean it with a soft, dry cloth.

- Never wear your watch into a Jacuzzi or hot tub or sauna. The combination of extreme heat, water and steam may cause the watch to lose some of its water resistance.

In the case of a screw down crown, make sure to screw in

- the crown tightly before using the watch.
- If the crown is not screwed down properly, any exposure to water may cause leakage and damage to the watch.
- Never use or adjust the crown, pushers or bezel while underwater.

to salt water, and gently clean it with a soft, dry cloth.


- Never wear your watch into a Jacuzzi or hot tub or sauna. The combination of extreme heat, water and steam may cause the watch to lose some of its water resistance.

In the case of a screw down crown, make sure to screw in

- the crown tightly before using the watch.
- If the crown is not screwed down properly, any exposure
- to water may cause leakage and damage to the watch.
- Never use or adjust the crown, pushers or bezel while underwater.

SCREW DOWN CROWN



Your watch may be equipped with a SCREW DOWN CROWN, which enables the watch to withstand greater water pressure and prevent leaks at the crown. This is a useful feature that must be properly used to work effectively.

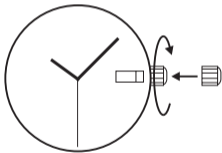

Always make sure your crown is properly secured in to your watch before using it.

THREE HAND / THREE HAND DATE WATCH


Setting the time and date

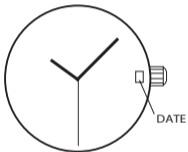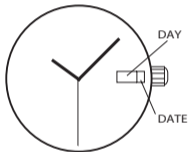

Setting the Time and Date

1. Pull the crown out to POSITION 2.
2. Turn the crown clockwise or counter-clockwise to set the date for the previous day.
3. Pull the crown out to POSITION 3.
4. To advance the time, turn the crown counter-clockwise until the date changes.
5. Adjust the time to the correct time.
6. Push the crown back into POSITION 1.

THREE EYE CHRONOGRAPH (SUBDIAL at 6, 9 and 12)

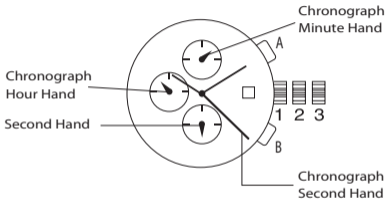

Time Setting

1. Pull the crown out to POSITION 3.
2. Turn the crown to set the desired time.
3. Return the crown to POSITION 1.

Date Setting

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise until the correct date is shown in the date window.
3. Return the crown to POSITION 1.


Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to reset the chronograph.

Adjusting the Chronograph

1. Pull the crown to POSITION 3.
2. Press A to reset the chronograph second hand to "0".
3. Press B to reset the chronograph minute and hour hands.
4. Reset the watch to the current time and return the crown to POSITION 1.

THREE EYE CHRONOGRAPH (SUBDIAL at 3, 6 and 9)

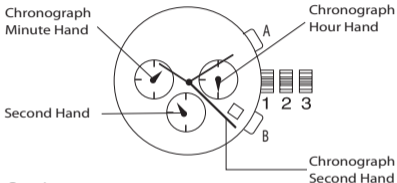

Time Setting

1. Pull the crown out to POSITION 3.
2. Turn the crown to set the desired time.
3. Return the crown to POSITION 1.

Date Setting

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise until the correct date is shown in the date window.
3. Return the crown to POSITION 1.


Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to reset the chronograph.

Adjusting the Chronograph

1. Pull the crown to POSITION 3.
2. Press A to reset the chronograph second hand to "0".
3. Press B to reset the chronograph minute and hour hands.
4. Reset the watch to the current time and return the crown to POSITION 1.

TWO EYE CHRONOGRAPH (SUBDIAL at 3 and 6)

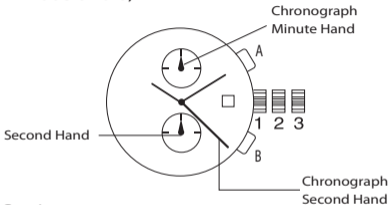

Time Setting

1. Pull the crown out to POSITION 3.
2. Turn the crown to set the desired time.
3. Return the crown to POSITION 1.

Date Setting

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise until the correct date is shown in the date window.
3. Return the crown to POSITION 1.


Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to reset the chronograph.

Adjusting the Chronograph

1. Pull the crown to POSITION 3.
2. Press A to reset the chronograph second hand to "0".
3. Press B to reset the chronograph minute and hourhands.
Reset the watch to the current time and return the crown
4. to POSITION 1.

TWO EYE CHRONOGRAPH (SUBDIAL at 12 and 16)

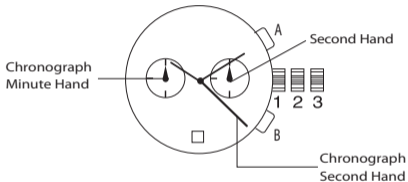

Time Setting

1. Pull the crown out to POSITION 3.
2. Turn the crown to set the desired time.
3. Return the crown to POSITION 1.

Date Setting

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise until the correct date is shown in the date window.
3. Return the crown to POSITION 1.


Chronograph Operation

1. Press A to start/stop the chronograph.
2. Press B to reset the chronograph.

Adjusting the Chronograph

1. Pull the crown to POSITION 3.
2. Press A to reset the chronograph second hand to "0".
3. Press B to reset the chronograph minute and hour hands.
Reset the watch to the current time and return the crown
4. to POSITION 1.

GMT WATCH with HOUR DUAL TIME HAND

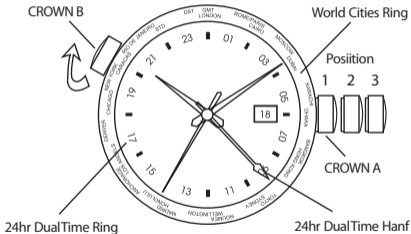

Setting the Local Time

1. Pull the crown to POSITION 3.
2. Turn the crown clockwise or counter-clockwise.
3. The 24 Hour Dual Time Hand will move in sync with local time.
4. Push the crown back to POSITION 1.

Setting the Local Date

1. Pull the crown to POSITION 2.
2. Turn the crown clockwise until the correct date is shown in the date window.
3. Push the crown back to POSITION 1.
4. DO NOT set the date between 9:00pm and 1:00am as this may affect the accurate turning of the date disc to the next day.

Setting the Dual Time


You can set the watch to another Time Zone, which will run simultaneously with the Local Time.

1. Pull the crown to POSITION 2.
2. Turn the crown counter-clockwise.
3. Set the 24 Hour Dual Time Hand to the corresponding dual time you wish to see. The hand should match the timings on the inner 24 Hour Dual Time Ring on the dial.
Set the Dual Time Zone on the hour for more accurate
4. readings. (i.e. When the local time is 1:00pm, 2:00pm, etc. adjust the 24 Hour Hand to the corresponding time on the hour - 8:00pm, 9:00pm etc.
Push the crown to POSITION 1. The 24 Hour Dual Time
5. Hand will run in sync with the local Time reading.

Reading the Third Time Zone

Using the World Cities Dial Ring, it is possible to read a third Time Zone on your watch.

1. Turn the crown B clockwise or counter-clockwise.
2. Align the Local Time Hand with the corresponding City Time Zone.

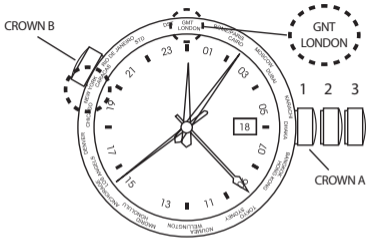

ie.

You are in London (GMT), and it is 12:00 (midnight) - align the World Cities ring to line up GMT to 24 (midnight). You can now read off other cities (timezones) at their respective times. (New York 19:00, London is 5 hours ahead of NYC).


AUTOMATIC (Self-Winding) Watch

Watches fitted with an automatic (self-winding) mechanism obtain power from movement of the wrist. When fully wound, the watch will run for approximately 40 hours if left untouched. If the watch has not been worn over 40 hours, it is recommended that the watch is manually wound to ensure the necessary power reserve for usage.

Winding

With the crown at POSITION 1, turn it 12-20 times and the movement will start after shaking the watch slightly.


AUTOMATIC DAY-DATE

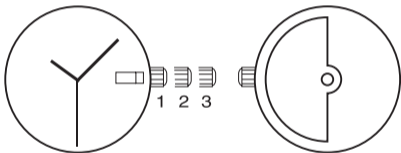

Setting the Time and Date

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise and set the date for the previous day.
3. Pull the crown out to POSITION 3.
4. Turn the crown counter-clockwise to advance the time and continue until the date changes to the present date.
5. Adjust to the correct time.
6. Push the crown back to POSITION 1.


AUTOMATIC SUBDIAL

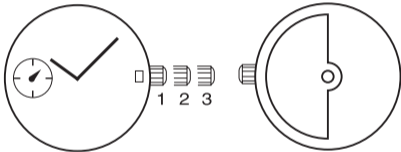

Setting the Time and Date

1. Pull the crown out to POSITION 2.
2. Turn the crown counter-clockwise and set the date for the previous day.
3. Pull the crown out to POSITION 3.
4. Turn the crown counter-clockwise to advance the time and continue until the date changes to the present date.
5. Adjust to the correct time.
6. Push the crown back to POSITION 1.

AUTOMATIC POWER RESERVE
(RESERVE GAUGE AT 6 O'CLOCK with
SUB-DIAL at 12)

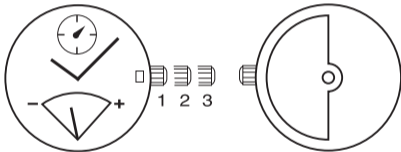

Watches featuring the power gauge on the dial will indicate the relative amount of power or charge still available for the movement. When the gauge is near '—', the watch should be recharged by winding the crown.

Setting the Time and Date

1. Pull the crown out to POSITION 2.
2. Turn the crown or counter-clockwise and set the date for the previous day.
3. Pull the crown out to POSITION 3.
4. Turn the crown counter-clockwise to advance the time and continue until the date changes to the present date.
5. Adjust the time to the correct time.
6. Push crown back into POSITION 1.

